

ClearOne®

COLLABORATE® Live 200

Quick-Start Guide




COLLABORATE LIVE 200

COMPONENTS INCLUDED

COLLABORATE Live 200	
	<p>COLLABORATE Live 200 codec with power supply, VESA Mounting Plate, and COLLABORATE Remote Control with USB dongle</p>
	<p>910-2100-006 UNITE 50 EPTZ camera, USB cable, camera remote control</p> <p>Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required.</p> <p>For the camera's control, use the COLLABORATE Codec Appliance's remote control.</p>
	<p>910-3001-200 CHAT 150C with USB cable</p>

CONNECTING PERIPHERALS

Connect the CHAT 150C, UNITE Camera, monitor(s), and network to the COLLABORATE Live 200 codec as shown.

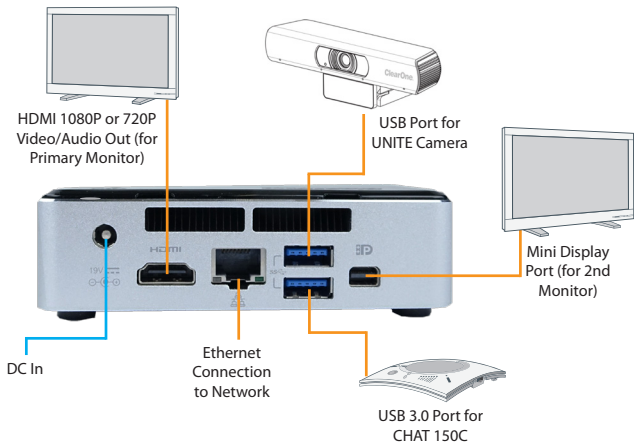


CONNECTING REMOTE CONTROL DONGLE

Install batteries in the remote control and plug in the USB dongle into the codec.


Note: To maximize range of the remote, verify that the dongle and the UNITE camera USB are plugged into opposite sides of the codec.

COLLABORATE LIVE 200

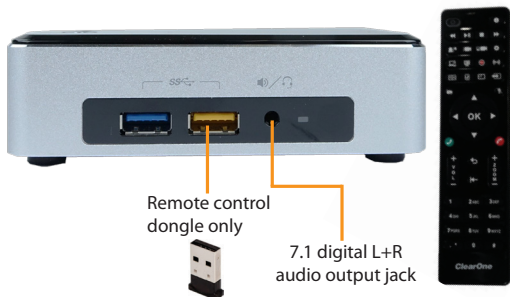

SECURITY

A lock support feature allows you to secure your codec.

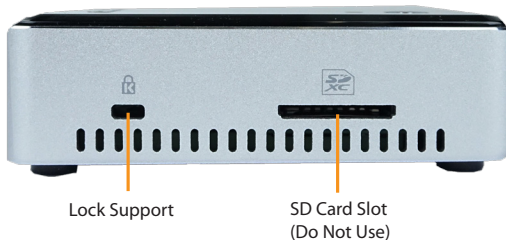


CONFIGURING DISPLAY SETTINGS

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Live is loaded, the Setup Wizard appears. The Setup Wizard lets you configure the system name, time, and network, proxy, and COLLABORATE Space settings. After the Setup Wizard is complete, using the remote control, navigate to the display settings:

Settings > Advanced > Display

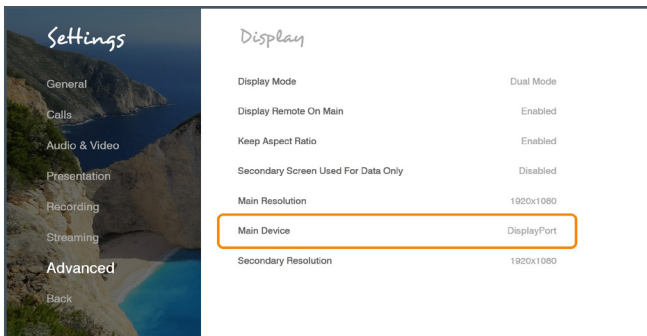


According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

COLLABORATE LIVE 200

CONFIGURING AUDIO SETTINGS

The COLLABORATE Live 200 audio input and output are set to the CHAT 150C.



Verify this in COLLABORATE **Settings > Audio & Video**

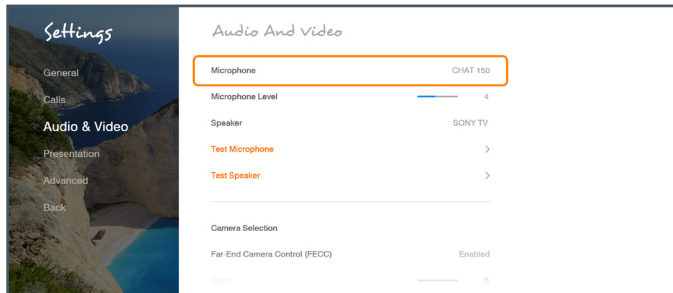

CONFIGURING NETWORK SETTINGS

Using your remote control, navigate into the network settings:

Settings > Advanced > Network

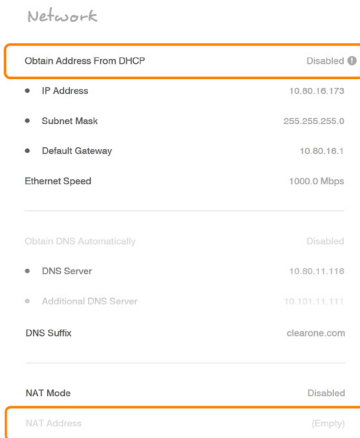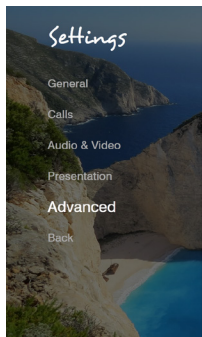

The COLLABORATE Live 200 obtains its IP automatically by default from a DHCP server.

Set “Obtain Address From DHCP” to “Disabled” to manually configure network settings.

COLLABORATE LIVE 200

CLEARONE CONTACTS

Headquarters

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116

US & Canada

Tel: 801.975.7200
TollFree: 800.945.7730
Fax: 801.303.5711

International

Tel: +1.801.975.7200
e-mail: global@clearone.com

Sales

Tel: 801.975.7200
e-mail: sales@clearone.com

TechSupport

Tel: 801.974.3760
e-mail: collaborate.support@clearone.com

Website

www.clearone.com

© 2019 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice. QSG-0078-001 Revision 1.0 February 2019