

ClearOne®

COLLABORATE® Live 300



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 600
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
collaborate.support@clearone.com

Notices

© 2023 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0073-001v1.1 April 2023


Components Included

COLLABORATE Live 300

No	Description	Products
1	<p>COLLABORATE Live 300 codec with power supply, VESA Mounting Plate, and COLLABORATE Remote Control with USB dongle</p>	
2	<p>910-2100-012</p> <p>UNITE 160 4K camera, power supply, USB cable</p> <p>Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required. For the camera's control, use the COLLABORATE Codec Appliance's remote control.</p>	
3	<p>910-3001-200</p> <p>CHAT 150C with USB cable</p>	


Connecting Peripherals

Connect the CHAT 150C, UNITE Camera, monitor(s), and network to the COLLABORATE Live 300 codec as shown.

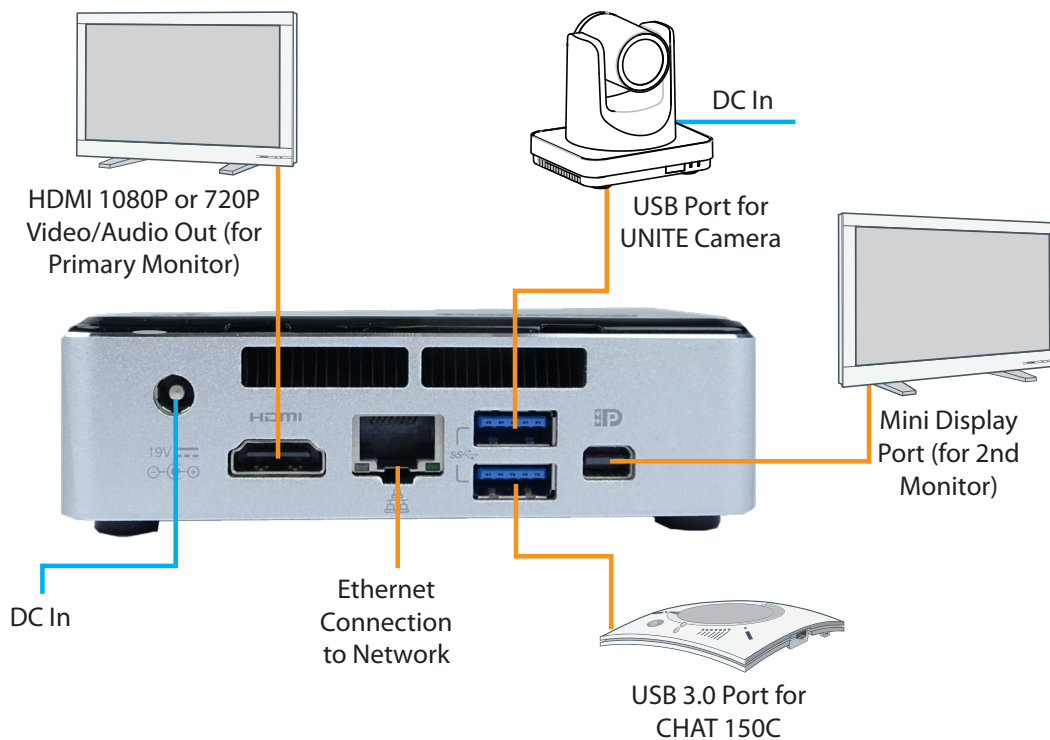

Connecting Remote Control Dongle


Install batteries in the remote control and plug in the USB dongle into the codec.

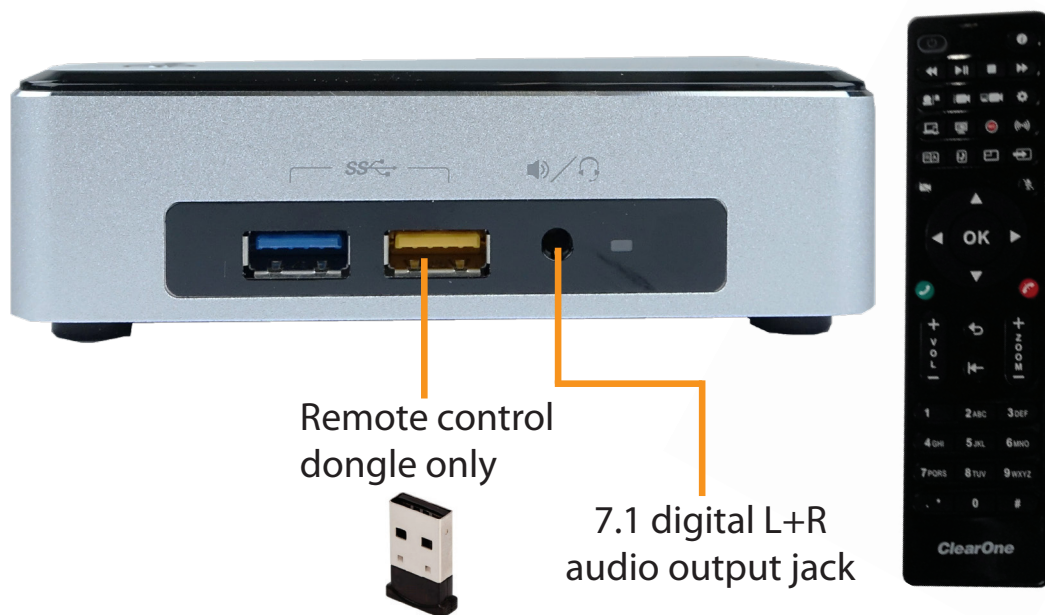

Note: To maximize range of the remote, verify that the dongle and the UNITE camera USB are plugged into opposite sides of the codec.

Security


A lock support feature allows you to secure your codec.

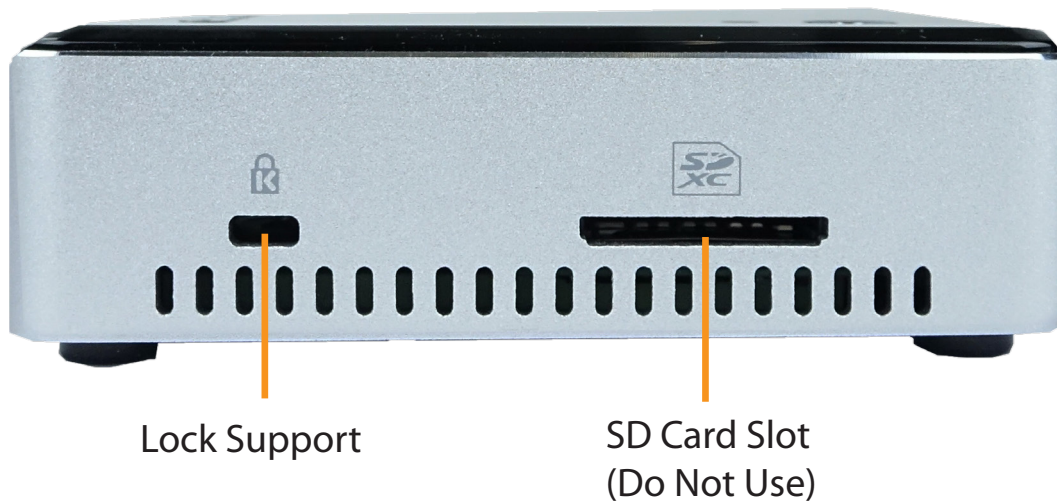

Configuring Display Settings

Once COLLABORATE Live is loaded, the Setup Wizard appears. The Setup Wizard lets you configure the system name, time, and network, proxy, settings. After the Setup Wizard is complete, using the remote control, navigate to the display settings:


Settings > Advanced > Display

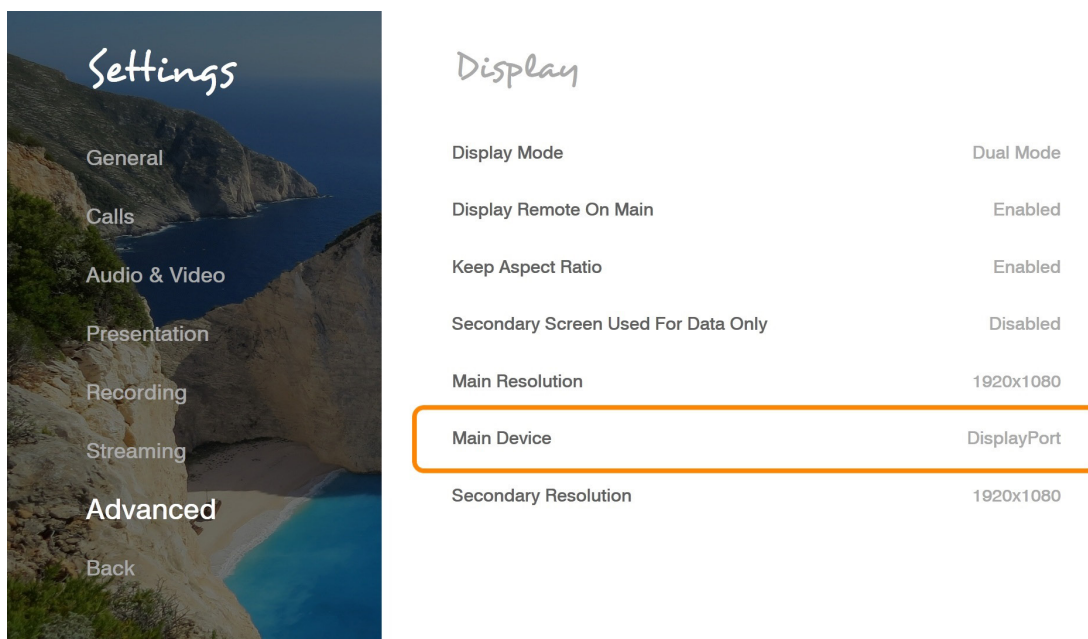

According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

Configuring Audio Settings

The COLLABORATE Live 300 audio input and output are set to the CHAT 150C.
Verify this in COLLABORATE **Settings > Audio & Video**

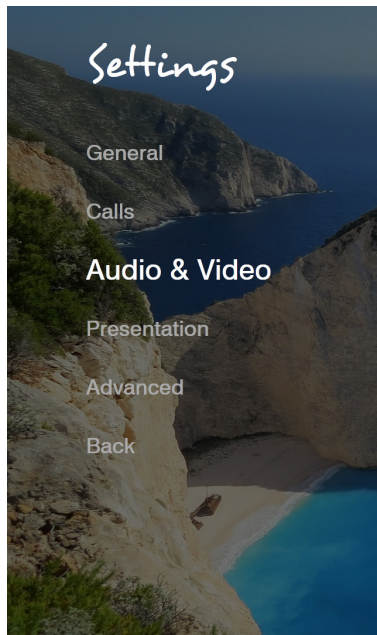

Audio And Video

Microphone CHAT 150

Microphone Level  4

Speaker SONY TV

[Test Microphone](#) >

[Test Speaker](#) >

Camera Selection





Far-End Camera Control (FECC) Enabled

Color  0

Configuring Network Settings

Using your remote control, navigate into the network settings:

Settings > Advanced > Network

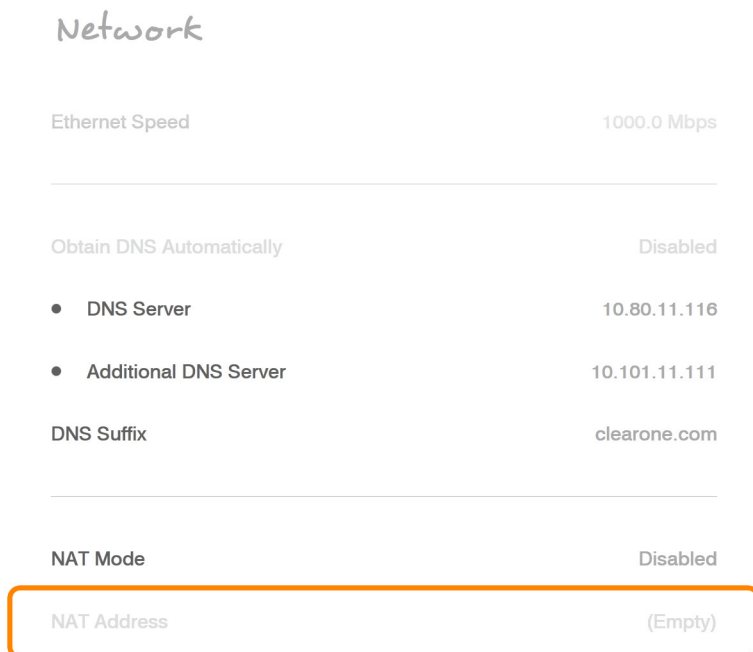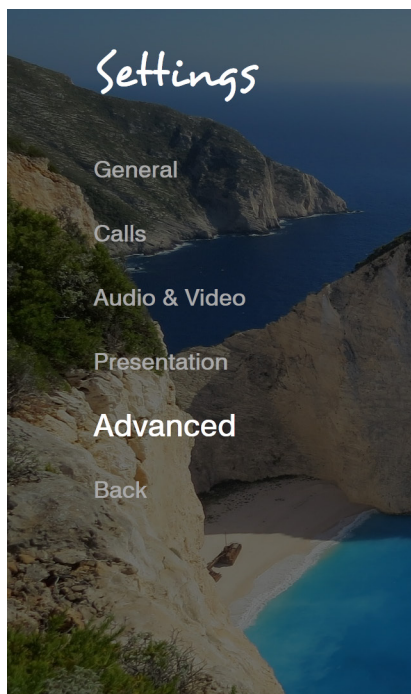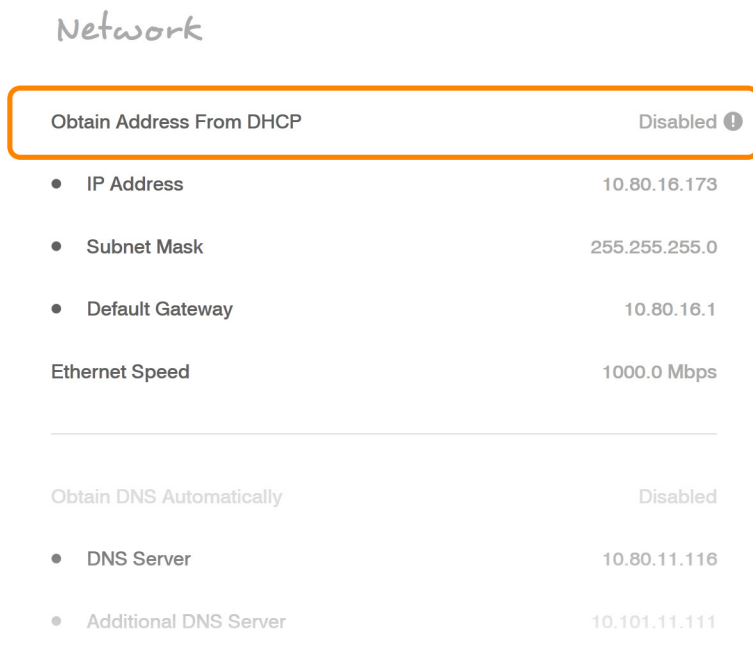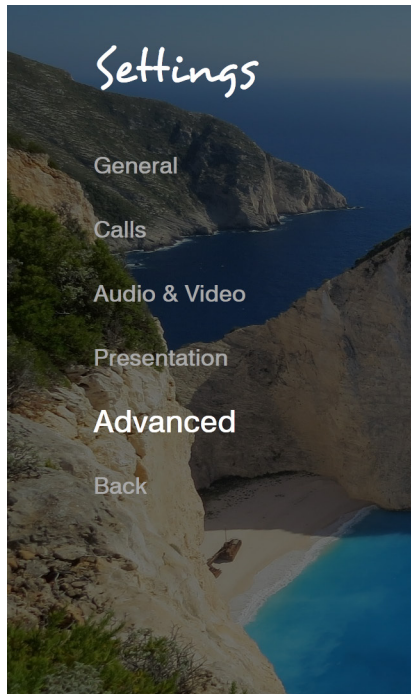

The COLLABORATE Live 300 obtains its IP automatically by default from a DHCP server. Set “Obtain Address From DHCP” to “Disabled” to manually configure network settings.